

H.264PRO MODEL DVR User Guide

CONTENTS

Date: 2008/09/23 VER: 1.0

Caution	3
Package	3
Specification	4
CHAP.1 Appearance	
1-1 Front panel introduction	5
1-2 Back panel introduction	7
1-3 IR remote controller introduction	8
CHAP.2 Installation	
2-1 Camera and monitor installation	9
2-2 Sensor and alarm installation	10
2-3 Network and serial port installation	11
2-4 HDD installation	12
2-5 Mouse installation	13
2-6 Power plugging	13
CHAP.3 Operation	
3-1 Display configuration	14
3-2 Channel switch	15
3-3 Audio switch	15
3-4 View in sequence	15
3-5 Freeze view	15
3-6 Zoom view	16
3-7 PIP view	16
3-8 PTZ control	16
3-9 Keylock	17
3-10 Panic Record	17
3-11 Playback	17
CHAP.4 Set up	
4-1 Log-in	20
4-2 Video & Audio	22
4-3 Record & Backup	24
4-4 Configuration	25
4-5 Network	27
4-6 PTZ	28
4-7 Others	29

H.264PRO MODEL DVR User Guide

CHAP.5 IRS and Network

5-1 Install Internet Relative Software	30
5-2 Remote access DVR	31
5-3 IRS operation	32
5-4 Remote BACKUP process	36
5-5 PLAYER operation	37

Appendix

1. Router setup	39
2. System configuration	43

Disclaimer:

- The product names mentioned in this manual are used as identifications only. The copyright of these names may belong to other companies.
- The product specifications and information are for reference only. They may be updated from time to time without notification.

H.264PRO MODEL DVR User Guide

Caution

- For your safety, disconnect the power before moving the DVR, installing, or replacing any parts or hard drive.
- Make sure all the power cables and wires are properly set up before using the DVR. Contact your distributor immediately if there is any defect.
- To avoid a short circuit, don't leave any unnecessary parts inside the DVR.
- Please avoid dramatic changes of the environment, such as dust, temperature, and humidity. Keep the DVR in a temperature ranging from 5°C ~40°C.
- Keep the DVR in a well-ventilated place and away from any heat-generating objects.
- Do not block the DVR's fan and vent.
- Do not expose this unit to direct sunlight.
- If you are not sure of the installation and setup, please consult the technicians.
- If there's any damage to this unit or the power supply, do not fix it yourself. Consult the technician or the distributor.

Package

- | | |
|---------------------|-----|
| ● DVR Main unit | × 1 |
| ● Power Supply | × 1 |
| ● Power Cable | × 1 |
| ● Remote Controller | × 1 |
| ● User Manual | × 1 |
| ● Software CD | × 1 |
| ● Accessories | × 1 |
| ● AAA Battery | × 2 |

Please contact your distributor immediately if any of the above items is missing.


H.264PRO MODEL DVR User Guide

Specification

4/8/16 CH H.264 Stand Alone DVR				
MODEL		4CH	8CH	16CH
VIDEO	Input	4CH	8CH	16CH
	Output	MAIN/SPOT/VGA		
AUDIO	Audio Input	1CH	2CH	4CH
	MIC input	1CH		
	Audio output	1CH		
LIVE VIEW	Split Screen	1 / 4 / 9 / 16		
	Zoom	Digital Zoom × 2		
	PIP	Available		
	Aequence	Available		
	Motion	Detection Division 32×24		
RECORD	Resolution	NTSC-352×240 / PAL-352×288		
	FPS	NTSC-120 IPS PAL-100IPS	NTSC-240 IPS PAL-200IPS	NTSC-480 IPS PAL-400IPS
	Compression	H.264 DUAL CODEC		
	Quality	Normal / High /Highest		
	Storage Device	SATA HDD × 2		
RECORD AUDIO	Format	G.726 or mp2		
PLAYBACK	Search mode	Percentage/ Time & Date /Event		
	Jog.shuttle	For Easy Search		
NETWORK	Remote Controlle	Remote viewer / remote backup		
	IE	Available		
	DDNS	Available		
	remote user access	4 persons or more		
	Speed Value	Adjustable		
BACKUP	Backup	Network backup 、 CD/DVD Backup 、 USB Backup		
ALARM	Sensor input	4	8	16
	Relay output	1 (NC/CO)		
OTHERS	PTZ Control	RS485 , supports PELCO D and other protocols		
	Control	Front panel / Mouse / IR remote Controller		
	Language	English/Spanish/German/France/Chinese...		
Mechanism	Dimension/ Weight	430mm(W) x 400mm(D) x 92mm(H) / 8 KG (w/o HDD)		
	Power	Switching Power (DC 12V, 6.67Amp)		

CHAP.1 Appearance

1-1 Front panel introduction

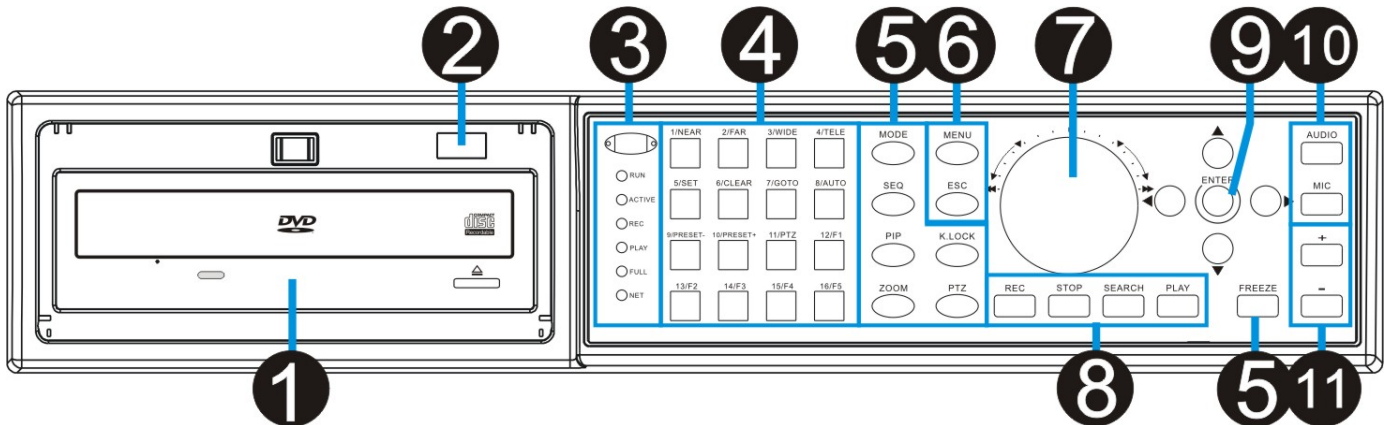

1.[DVD-RW]-Built-in DVD-RW for DVD / CD back-up.

2.[USB port]-Backup and up

3. [IR Receiver & LED Lamps]

- IR Remote Controller Receiver.
- DVR Status LED:

RUN- Flashes when play picture by picture through J. Shuttle.

ACTIVE- On when the J. Shuttle is ready to use.

REC- On while recording and flashes at stand-by mode, such as no motion triggered at the motion record mode

PLAY- On while playback.

FULL- On when HDD storage is full.

NET- On when the DVR is connected remotely.

4.[1~16 Channel Button / PTZ]

- Switch full screen among channels, 1 for Channel 1, 2 for Channel 2, and so on.
- Press [PTZ] to enter the PTZ control mode. Press the PTZ buttons to control the PTZ camera directly.

5.[Control]

- MODE- Switch among full and split screen displays.
- SEQ- Full screen sequencing or the smaller screen sequencing in PIP mode. °
- PIP- To enter the Picture in Picture mode from full screen mode °
- ZOOM- To enlarge the picture. Use the direction buttons and move to the area to be enlarged.
- K.LOCK- Lock the buttons on front panel.
- PTZ- Freeze in full screen or split screen.
- FREEZE- Freeze in full screen or split screen.

6.[MENU & ESC]

- MENU- Enter the menu and set up.
- ESC- Cancel previous function

H.264PRO MODEL DVR User Guide

7.[Jog Shuttle]

- In playback: inner rim to play picture by picture, outer rim to play fast forward and backward. Turn clockwise to play fast forward, and counterclockwise to play fast backward.

8.[Record / Playback function]

- REC- To activate Emergency Record at continuous, Super fine quality and Best resolution. Press STOP to exit the Emergency Record mode.
- STOP- Stop the emergency record and return to the record schedule programmed in the Record Setup.
Stop playback and return to the LIVE mode.
- SEARCH- Enter the Search dialog window to search by percentage, date / time, or the event list.
- PLAY- Play the recorded video beginning from the end of previous playback.

9.[Directions & ENTER]

- Directions- Navigate the menu.
- ENTER-Confirm the selected options

10.[AUDIO / MIC]

- AUDIO- Press to play the audio, and press again to go to the next audio channel.


11.[+ & -]

- Adjust set-up value.
- Adjust display orders of channel.


H.264PRO MODEL DVR User Guide

1-2 Back panel introduction


[4CH]

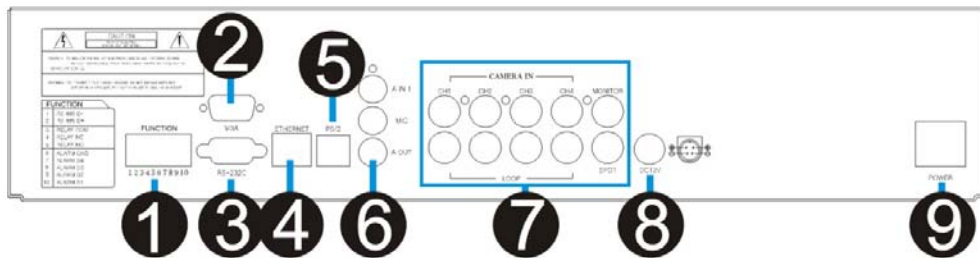

[8CH]

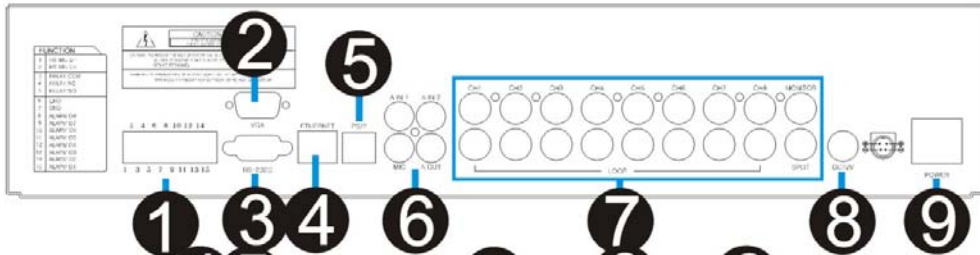

[16CH]

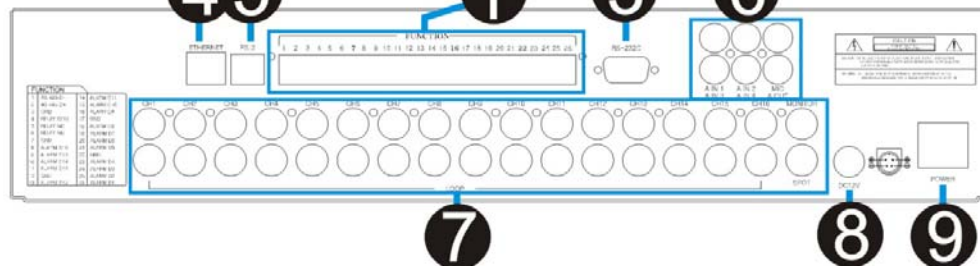

1.RS485, Relay Output, Sensor Input

- RS485, for connection to PTZ cameras.
- 16 sensor inputs and 1 relay output.

2.VGA-Connection to a VGA monitor or TFT LCD.

3.RS-232C port - Connection to PC or other DVR control devices.

4.ETHERNET port - Connection to Ethernet device

5.P/S2 port - For PS/2 Mouse connection.

6 Audio Input/Output - Audio input 1~4 channel and Audio output 1 channel

7.[1~16 Camera Input/LOOP Output]

- CAMERA IN - channel 1~16 camera input.
- LOOP - channel 1~16 camera loop out °
- MONITOR - Connection to monitor.
- SPOT - second monitor output. Once alarm or motion is triggered, it will pop up automatically or display in sequence according to the set up. °

8. Power Input]

- DC power input (DC12V)

9. Power Switch - P Power ON/OFF °

H.264PRO MODEL DVR User Guide

1-3 IR remote controller introduction

1.[DVR LED]

- Displays current DVR's ID.

2.[MODE]

- Multi-screen display selection

3.[AUDIO]

- Press to play the audio, and press again to go to the next audio channel.

4.[ESC]

- Cancel previous functions °

5.[1~16]

- Switch channel in live or playback; password entering.

6.[MENU]

- Enter menu or exit.

7.[+ / -]

- For value adjustment in set-up.

8.[Direction/Enter]

- Direction - Navigate the menu.
- Enter - Select or adjust options in setup.

9.[REC]

- To activate Emergency Record at continuous.

10[SEARCH]

- Open the search window in playback.

11.[PLAY function]


- ◀ ▶ PLAY - Play the recorded video directly.
- || PAUSE- Pause playback
- ■ STOP- Stop playback and return to the LIVE mode.
- ⏮ REW- Fast rewind, press again to select the speed.
- ⏭ FF- Fast forward, press again to select the speed.
- ⏮⏭ :Rewinds to beginning or forwards to end of the recording

12.[Live view function]

- ZOOM- To enlarge the picture. Use the direction buttons and move to the area to be enlarged
- SEQ- Automatically display full screen or split screen in sequence.
- FRZ- Freeze the screen in display.
- PIP- Picture in Picture. Enter PIP mode in full screen.
- FUNC-Open tool bar.
- PTZ- Enter the PTZ camera control mode.

13.[DVR ID]


- Select DVR

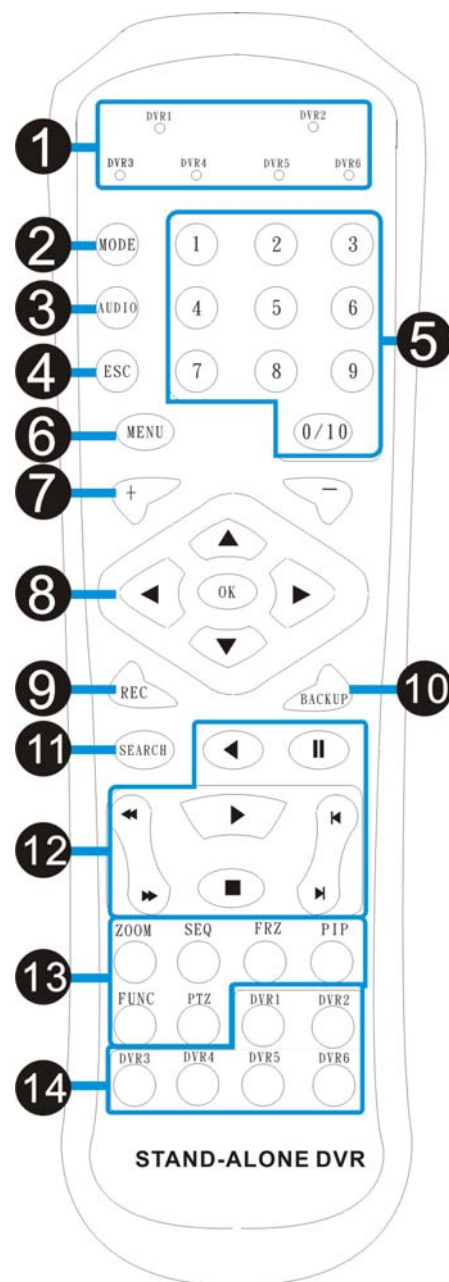

CHAP.2 Installation

2-1 Camera and monitor installation


2-1-1 Camera installation

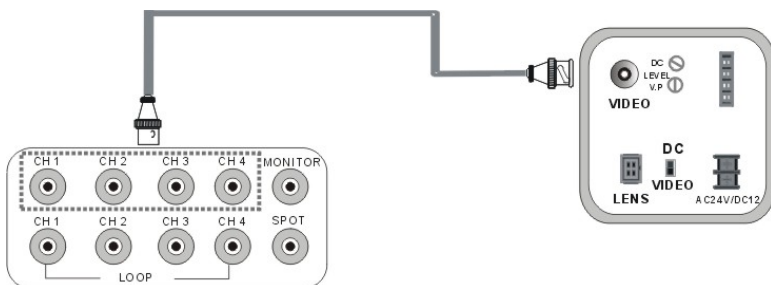

Connect camera to DVR camera in CH1~CH16

※Please do not start the DVR before the camera installation is done.


2-1-2 Monitor and SPOT installation

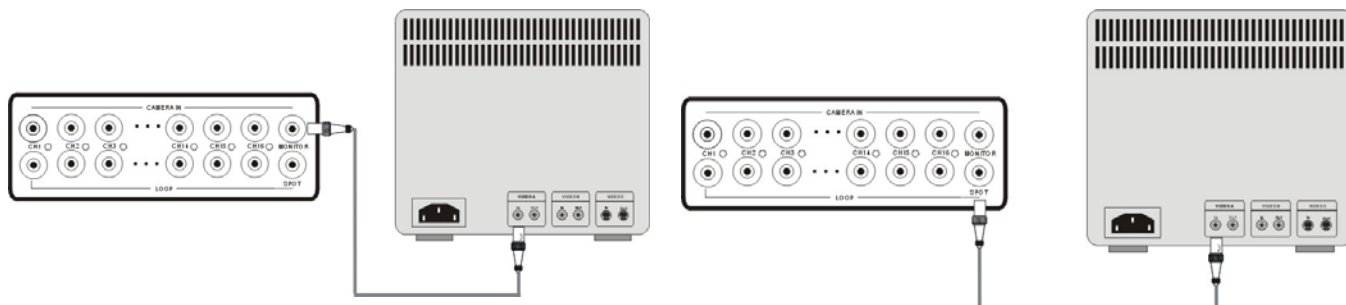

Monitor: Connect the MONTIOR port on the DVR back panel to the “video in” port on the monitor.

SPOT: second monitor output. Once alarm or motion is triggered, it will pop up automatically or display in sequence according to the set up.

2-1-3 Loop out installation

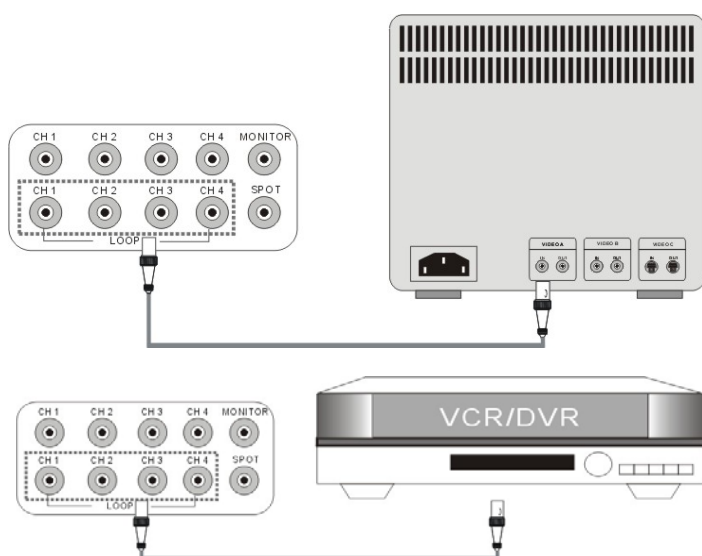



To monitor a single channel, connect the “loop out” of the corresponding channel to a monitor.

To record a specific channel individually, connect the “loop out” of the corresponding channel to a DVR, VCR, or other record device.

H.264PRO MODEL DVR User Guide


2-2 Sensor and alarm installation

2-2-1 Input & Output

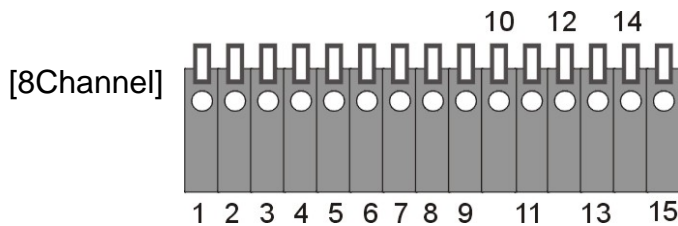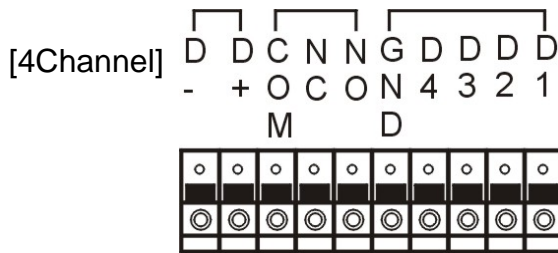

FUNCTION					
1	RS 485 D -	6	GND	11	ALARM D5
2	RS 485 D+	7	GND	12	ALARM D4
3	RELAY COM	8	ALARM D8	13	ALARM D3
4	RELAY NC	9	ALARM D7	14	ALARM D2
5	RELAY NO	10	ALARM D6	15	ALARM D1

[16Channel]

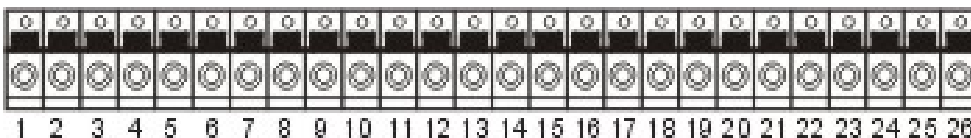

FUNCTION				
1	RS 485 D -	14	ALARM D11	
2	RS 485 D +	15	ALARM D10	
3	GND	16	ALARM D9	
4	RELAY COM	17	GND	
5	RELAY NC	18	ALARM D8	
6	RELAY NO	19	ALARM D7	
7	GND	20	ALARM D6	
8	ALARM D16	21	ALARM D5	
9	ALARM D15	22	GND	
10	ALARM D14	23	ALARM D4	
11	ALARM D13	24	ALARM D3	
12	GND	25	ALARM D2	
13	ALARM D12	26	ALARM D1	

1.[D1~D16 Alarm Input/GND for Location]

- 16 Sensor inputs, for sensor input installation.

2.[Relay Output NO/NC/COM]


- The application of relay output is NO+COM + NC+COM.

2-2-2 Sensor installation

- Alarm will be triggered once one (or more than one) alarm input (D1~D16) causes short circuit or open circuit with GND.

2-2-3 Relay output installation


- Alarm output can be NO or NC, depending on the settings.
- NO-COM: the NO and COM terminals are open-circuit, and it'll become closed-circuit when alarm triggered.
- NC-COM: the NC and COM terminals are closed-circuit, and it'll become open-circuit when alarm triggered.

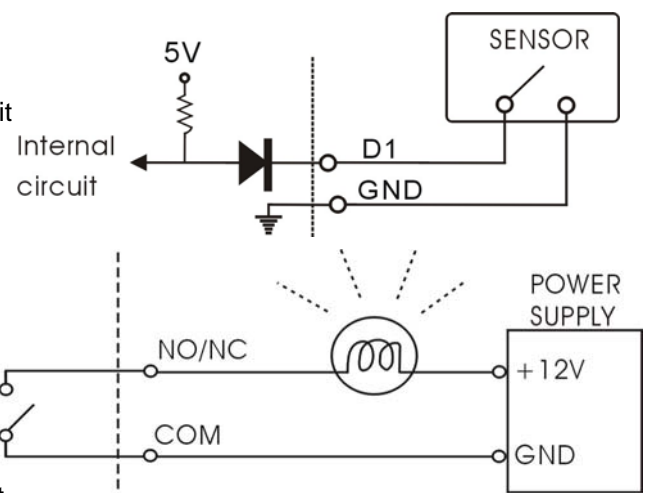

H.264PRO MODEL DVR User Guide


2-3 Network and serial port installation

2-3-1 Network setup

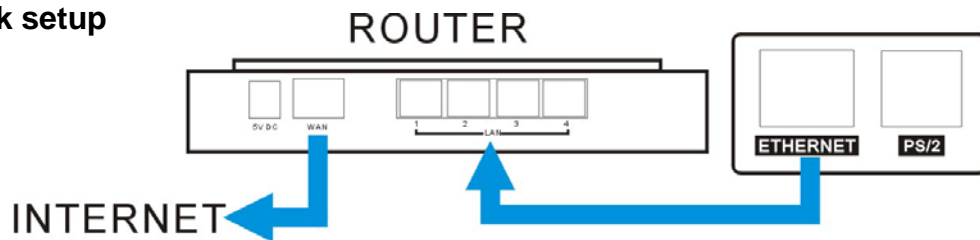

- Connect the network cable to "Ethernet" on back panel.
- Ethernet Setup between ADSL and Cable is different.


2-3-2 Serial port setup

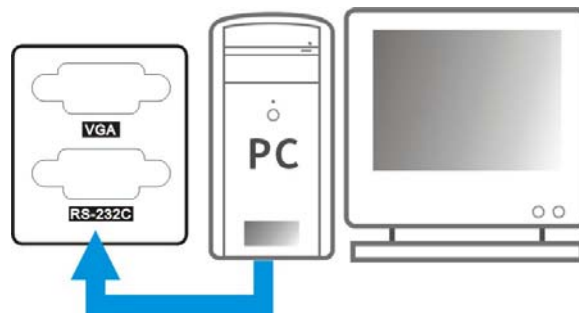

- User is able to connect the COM port of PC or other device to the DVR through RS232.
- RS232 settings (baudrate/ parity/ length/ stop bit) are NOT adjustable.
The transmission baudrate is 19200bps, length 8 bits, stop bit 1, and the parity is none.
- ASCII-CODE is 1 BYTE.


connector	description	ASCII-CODE									
		Func.	CODE	Func.	CODE	Func.	CODE	Func.	CODE	Func.	CODE
1	DCD	REC	R	RIGHT	K	MODE	D	CH3	3	CH11	!
2	RxD	STOP	S	NEXT	N	PIP	I	CH4	4	CH12	@
3	TxD	PLAY	P	ENTER	0X0D	SEQ	Q	CH5	5	CH13	#
4	DTR	SEARCH	E	-	<	J.SHU	L	CH6	6	CH14	\$
5	GND	MENU	M	+	>	KLOCK	C	CH7	7	CH15	%
6	DSR	UP	U	PTZ	T	QPLAY	Y	CH8	8	CH16	^
7	RTS	DOWN	J	ZOOM	Z	CH1	1	CH9	9		
8	CTS	LEFT	H	FRZ	F	CH2	2	CH10	0		
9	NC										

- To connect DVR to a PC, users must use a twisted RS232 cable, as the illustration.

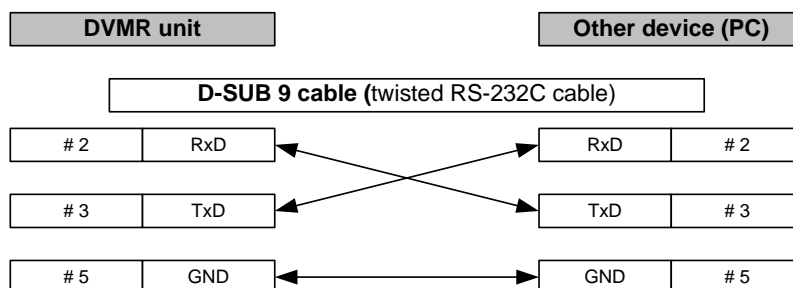

H.264PRO MODEL DVR User Guide


2-3-3 PTZ camera installation

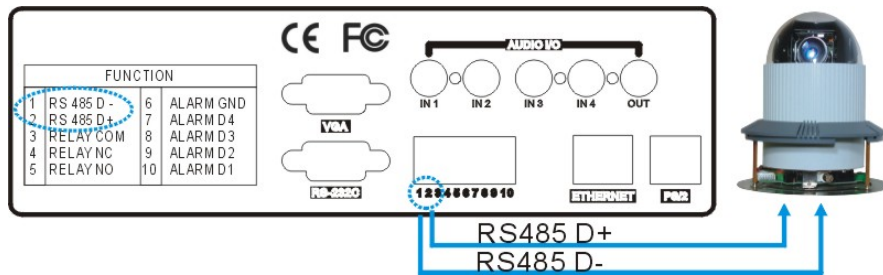

- Please connect the PTZ's D+ to the DVR's D+ , and D- to D-.
- After the connection and the related setup is done, users are able to control the PTZ camera through the front panel buttons.

2-3-4 Microphone and Speaker installation

[Audio input / Microphone input]

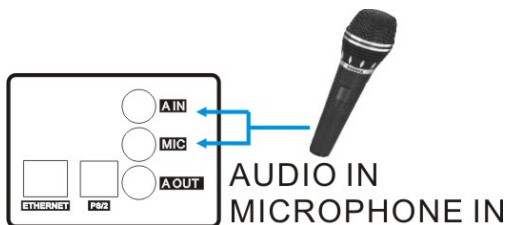


[Audio input]

- 4ch Audio Input is available for 16CH, 2ch for 8CH, 1ch for 4CH.
- Audio input should be connected according to assigned camera channels for audio recording.
- Audio channel 1 is assigned for camera channel 1~4, audio channel 2 for camera channel 5~8, audio channel 3 for camera channel 9~12 and audio channel 4 for camera channel 13~16.

[Microphone]

- 1 Microphone Input is available. It does not record microphone input.
- Microphone is to support TWO-WAY Audio, for communication with remote user.

[Audio output]

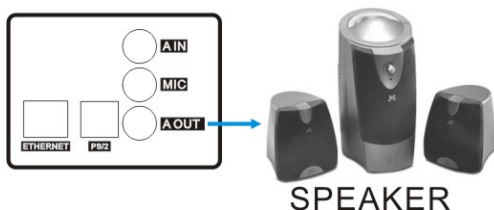


- 1ch Audio Output is available.
- Connect a speaker to the audio output, DVR can play the audio during the live view and playback.
- Selected Audio channel at DVR will be output

2-4 HDD installation

[Steps]

1. Disassemble the bolts as illustrated.

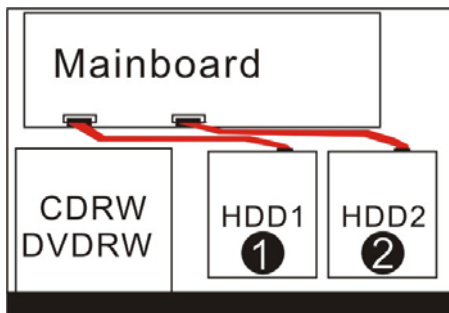


2.HDD Installation:

Please insert the first HDD as shown in ❶, insert the second HDD as shown in ❷.

H.264PRO MODEL DVR User Guide

2-5 Mouse installation

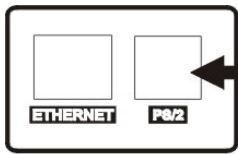


PS/2 port in back panel

2-6 Power plugging



Insert the adapter to the rear power socket of DVR. Insert the power cable to the other side of adapter.

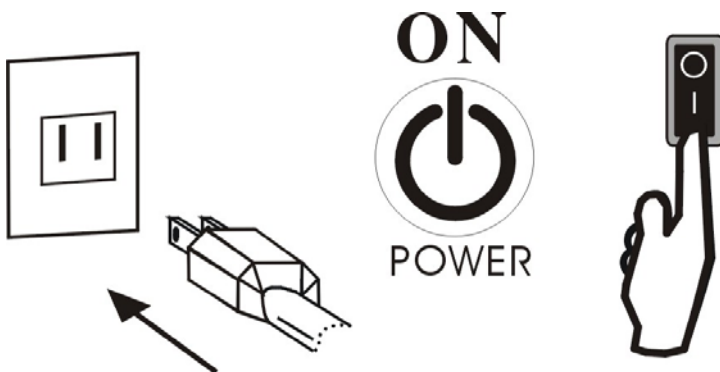


Plug in the power cable and power on the DVR.

Caution !

Only the original supplied power adaptor is allowed.

CHAP.3 Operation

3-1 Display configuration

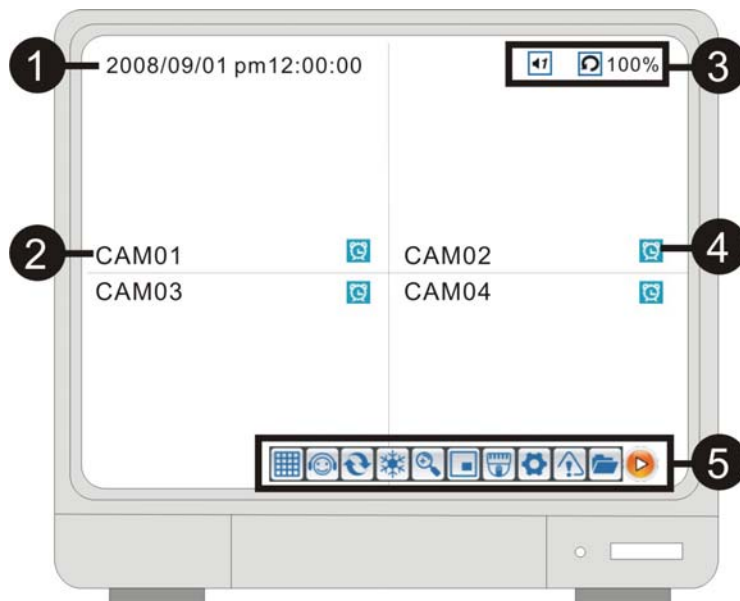



1.[Date / Time]

- Displays current system time or the recorded time in playback.

2.[Camera title]

- Camera title of the displayed channel. Camera title can be modified in the setup menu.











 
3.[Status icon]

-  : Indicates the Audio output channel.
-  : Appears when HDD overwrite mode is selected.
- 100% : Indicates used HDD space.

4.[Record mode]

- The current recording mode:  Panic record /  continuous rec /  Alarm rec /  Motion rec.


5.[Toolbar]

-  Screen division panel pops up for various screen split display mode. (1/4/9/16)
-  Audio Channel Selection Panel pops up, and audio of selected channel turns on.
-  Automatically display full screen or split screen in sequence.
-  Freeze the screen in display
-  Enlarges the picture
-  Picture in Picture.
-  Enters the PTZ camera control mode.
-  Enters the setup menu.
-  Panic Recording
-  Opens the search window.
-  Plays the recorded video directly.


H.264PRO MODEL DVR User Guide

3-2 Channel selection

- Press the number button to switch to the corresponding channel for its full screen view
- Mode: press to switch among different split modes: 4/9/16 splits.
- +/-: button to adjust the order.
- Cycles through split modes:

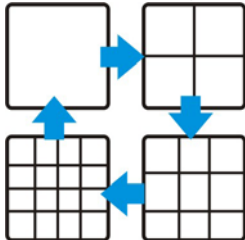

Split mode:
4CH: 1 / 4
8CH: 1 / 4 / 9
16CH: 1 / 4 / 9 / 16

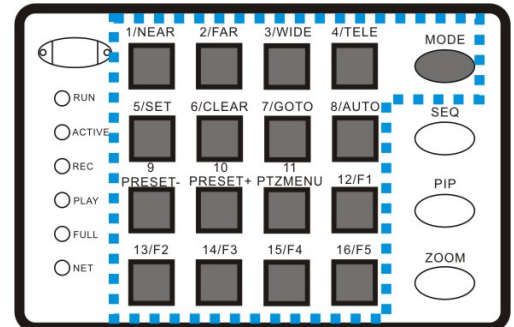


- Click on to select different split modes , 1 channel / 4 channels / 9 channels / 16 channels .
- Double left click on mouse to switch between single channel and split screen. Right click to switch channels.

3-3 Selection Audio Channel

- Press AUDIO or click to select audio channel .Audio 1 /Audio 2 /Audio 3 /Audio 4 /Mute
- To go to the next audio channel, press AUDIO again. Press Once to play channel 1; press twice to play channel 2; press three times to play channel 3; press four times to play channel 4 and five times to turn Audio OFF.

3-4 View in sequence


- Press SEQ or click , to put camera image sequence in full screen mode
- Press ESC or click again to cancel sequence mode.
- Scroll in single channel or split mode.

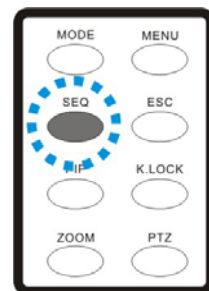

3-5 Freeze view



3-5-1 Freeze in split mode

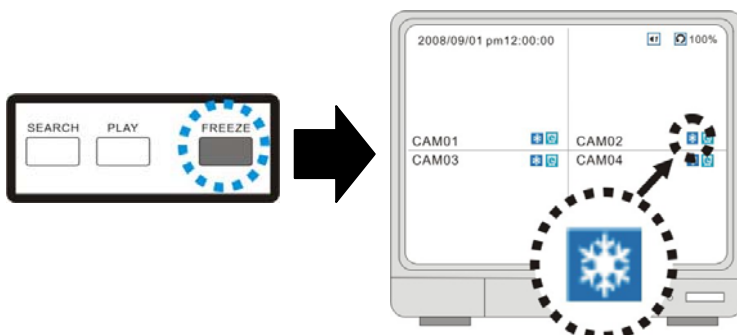
- In a split screen mode, press FREEZE or click , all channels will freeze, and the icon will appear. Press a number button to select the corresponding channel to freeze. Press the number again to cancel freeze.
- Press ESC or click again to cancel sequence mode.



H.264PRO MODEL DVR User Guide

3-6 Zoom in view

- In LIVE mode, Press ZOOM or click . The image Zooms in x2. Use the mouse to move selected frame. Press ESC or click  again to exit zoom mode.

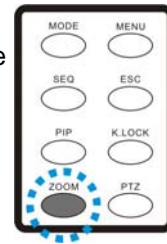


1.[Specific enlarge area]



- Use the direction buttons to choose an area


2.[Zoom in area]

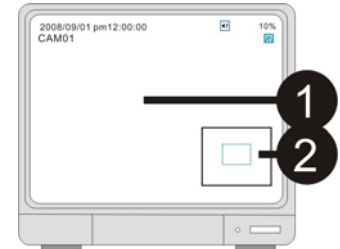- Show the enlarge area coordinate from full screen channel



3-7 Picture in picture

- In LIVE mode, Press PIP or click  to enter Picture in Picture mode.
- Press ESC or click  again to exit PIP mode
- Press front panel buttons 1~16 or left click on mouse to switch channels at main screen ① , sub screen ② scroll automatically.

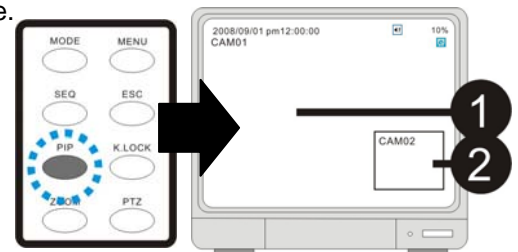


3-8 PTZ control

- In LIVE mode, Press PTZ or click  to enter PTZ control mode. then enter passwords
- PTZ control function:

NEAR	FOCUS NEAR	SET	SET PRESET
FAR	FOCUS FAR	CLEAR	CLEAR PRESET
OPEN	IRIS OPEN	GOTO	GOTO PRESET
CLOSE	IRIS CLOSE	AUTO	AUTO SCAN




- Use arrow keys or mouse to control PTZ.
Place mouse pointer on the center of screen and use scroll wheel to ZOOM IN/ZOOM OUT .

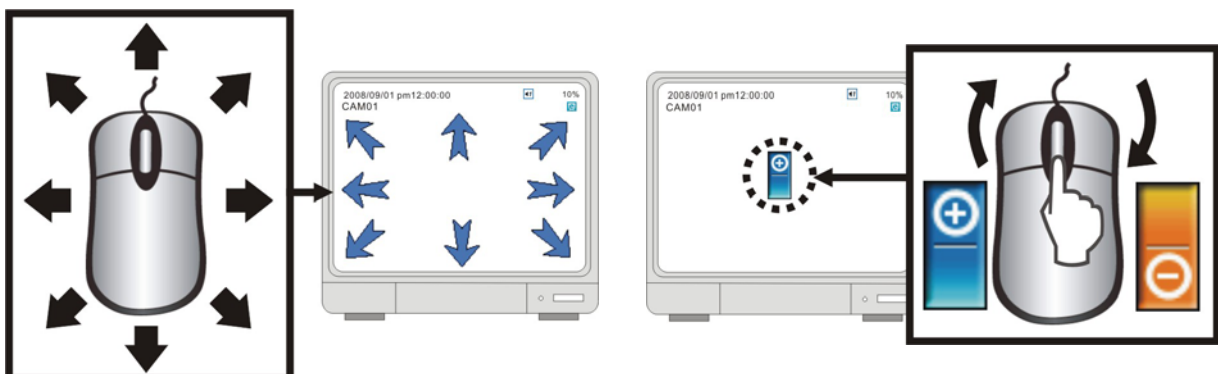




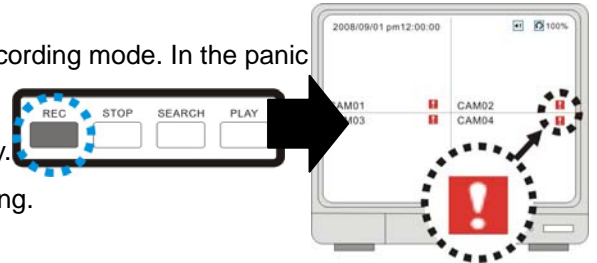
H.264PRO MODEL DVR User Guide

3-9 Key lock

- Hold down K.LOCK until K.LOCK dialogue window pops up. Click OK to lock keyboard and Mouse and display K.LOCK icon  of DVR status.
- To unlock, press and hold K.LOCK and enter Admin's password.
- Please note that rebooting the DVR can not deactivate K.LOCK.



3-10 Panic Recording

- In LIVE mode, Press REC or click  to activate panic recording mode. In the panic recording mode, the record mode icon will switch to  . and recording will start at continuous mode at highest quality.
- Press STOP or click  again to deactivate Panic recording.



3-11 PLAYBACK


3-11-1 Quick play and Search

- Press PLAY key or click  to start playback starting from the last playback time.
- Press SEARCH key or click  to open the search dialog window. There are 3 search modes: TIME/DATE, percentage, EVENT LIST.
- You can change the target Date/Time values by clicking “+” and “-” .

Play and search require passwords input.


[Search by Date/Time & by Percentage of HDD]

1. Select search mode – Date&time/ Percentage /Event list
2. It shows the start and end times of the recording data
3. Insert time and date to search (Data has to be in between START TIME and END TIME)and press [SEARCH]. If the request is valid, the dvr will allow you to press on [PLAY]
4. By adjusting search percentage bar, you can play back the corresponding part of the recording.
5. PLAY-Start to play / CANCEL- Cancel playback.

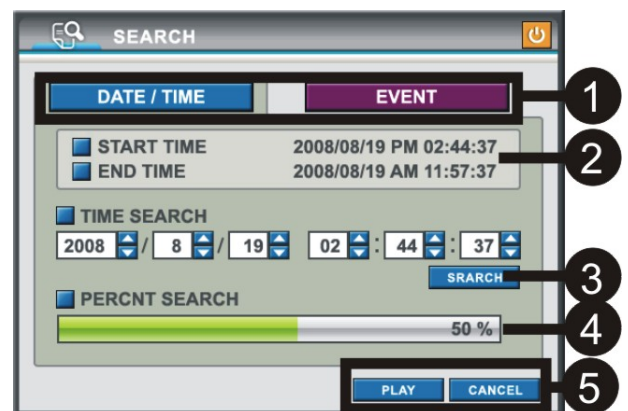

[Event list]

1. It shows the start and end times of the recording data.
2. Event list page navigation buttons.
3. Display total even lists.
4. Shows the time and type of events: Motion detection (MOTION), Image lost (LOSS), Alarm trigger (ALARM).
5. Event list scroll bar

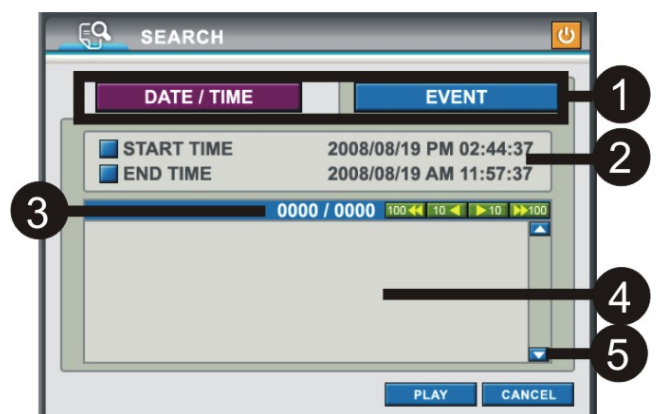


H.264PRO MODEL DVR User Guide

3-11-2 Playback



1. Shows the date and time of the recording data.



2. [Status icon]



-  : the number represents audio output channel.

 : Playback speed from 1/32X to 32X


 : Playback status icon

  (1X playback)

  (Fast forward)

  (Slow forward)

 (Pause)

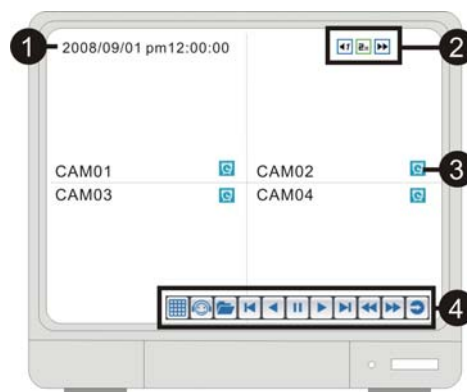

3. Record mode mark:  Continuous record /  Alarm record /  Motion record.

4. Playback function key:

 Move to Beginning  Move to the end of recording and stop.

 Playback in Reverse Direction.

 Begin Playback.

 Decrease Backward Playback Speed.

 Increase Playback Speed


 Pause

 Exit

- Click  then click  or  to playback step by step.

3-11-3 Playback speed adjustments

[Adjust Playback speed by Direction key]

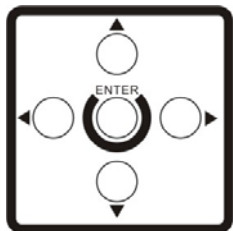

- While playback, using the direction keys to adjust the playback speed.

▲ Speed up the playback ▼ Slow down the playback

◀ Rewind


▶ Play in forward direction

The range of speed adjustment: 1/32X~1X, 1X~32X

[Adjust Playback speed by JOG-SHUTTLE]


- While in playback mode, press "J.SHUTTLE " key to adjust the playback speed.

1. [High speed playback/Low speed playback/Forward Playback/Rewind Playback]

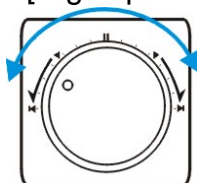


- Use the outer dial of Jog-shuttle to adjust the playback speed. Turn clockwise to advance forward, and counter-clockwise to advance backward.

2. [Playback step by step]

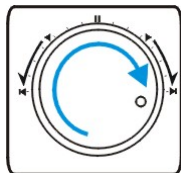

- Use the inner dial of the Jog-shuttle to advance frame. Turn clockwise to advance forward, and counter-clockwise to advance backward.

[Adjust Playback speed by IR remote controller]

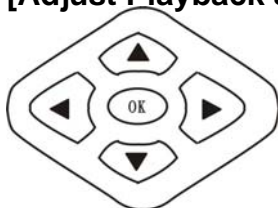


- While playback, select the direction keys of remote control to adjust the speed.

▲ X times high-speed playback. ▼ X times low speed playback.

◀ Rewind.

▶ Play in forward direction.

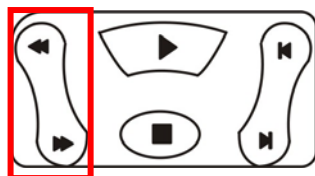


- Adjust the speed by REW key (High-speed backward playback) or FF key (High-speed forward Playback). Press the keys repeatedly to adjust the speed rate.
- Click PAUSE then press ◀▶ can playback picture by picture.(Step playback in backward or in forward).

CHAP.4 Set Up

4-1 Log-In

4-1-1 DVR LOG-IN

- Press MENU or click  to login DVR system.
- Click   to switch USER.
- Use CH. SELECTORS 0~9 to enter the password.



※Default password & level

ID	Defaule password	VIDEO AUDIO	RECORD BACKUP	CONFIGURA TION	NETWORK	PTZ	OTHERS	SEARCH PLAY
ADMIN	(empty)	○	○	○	○	○	○	○
MANAGER1~3	1~3	X	○	○	X	○	○	X
USER1~6	1~6	X	X	X	X	X	X	X

○ – Enable / X – Disable

Caution:

1. It is strongly suggested to change the password after the initial setup. Please keep records of your passwords. Rebooting the DVR and resetting the factory defaults will not reset the password to the default.
2. Please contact your reseller if you forget the password.

H.264PRO MODEL DVR User Guide

4-1-2 Main menu



Icon	Selection	Description
	VIDEO AUDIO	AUDIO,VGA,DISPLAY SETUP,INTERVAL,CAMERA SETUP,COLOR ADJUSTMENT,CAMERA TITLE,EVENT POPUP
	RECORD BACKUP	RECORD SETUP,SCHEDULE,HOLIDAY,USB BACKUP,CD/DVR BACKUP
	CONFIGURATION	DATE/TIME,PASSWORD SETUP,REMOTE CONTROL,BUZZER,HDD SETUP,HDD INFO,MOTION,ALARM
	NETWORK	ETHERNET,CONNECTION,WEB SERVER,DDNS,PPPoE
	PTZ	CHANNEL,PROTOCOL,ID,BAUDRATE,PAN/TILT/ZOOM/FOCUS SPEED
	OTERS	FACTORY DEFAULT,LANGUAGE,UPGRADE,SYSTEM INFORMATION
	Return to main menu.	
	Return to previous menu	
	Exit setup menu.	
	save settings	
	Cancel modifications.	
	return to default settings	

4-2 VIDEO&AUDIO

4-2-1 AUDIO



1. Set audio output volume.

2. Click OK to save setting.

Click DEFAULT to return to initial settings.

4-2-2 VGA





1. VGA: Turn ON / OFF VGA

2. RESOLUTION: Set VGA Resolution - 640×480 / 800×600 / 1024×768 / 1280×1024 .

3.FREQUENCY- 60HZ or 75HZ .

4-2-3 DISPLAY SETUP

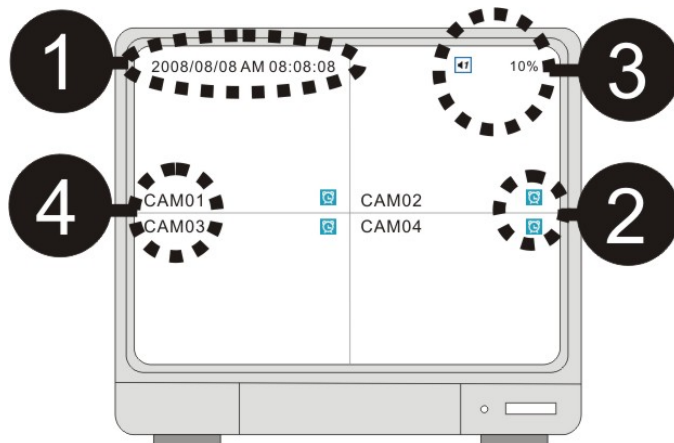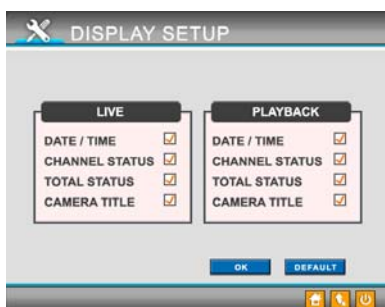

[LIVE / PLAYBACK]

- Select contents to be displayed on Live and Playback screen.


1.DATE/TIME- Display (ON) or hide (OFF) the Current / Record time.

2.CHANNEL STATUS- Display (ON) or hide (OFF) the recording status.

3.TOTAL STATUS- Display DVR status icon and HDD record percentage used.

4.CAMERA TITLE- Display (ON) or hide (OFF) the camera title.

4-2-4 INTERVAL

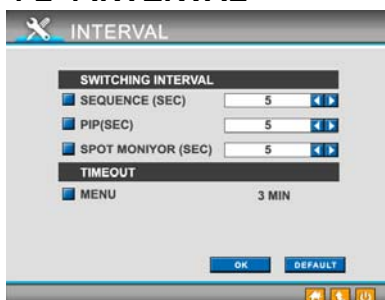

1.SEQUENCE - Full Screen Sequence Interval setup.

2.PIP - Picture in Picture, the sub-picture's sequence interval setup.

3.SPOT MONITOR - Set up the sequence display interval on spot monitor.

4.MENU - Menu display dwell time.

H.264PRO MODEL DVR User Guide


4-2-5 CAMERA SETUP



- Set camera activation.

1. STATUS –Camera type(NTSC/PAL/LOSS)
2. COVERT –Hide the camera from the display, while recording remains unaffected
3. REC –Select checkbox of camera to record.
4. Click to change channel ° (1~4CH / 5~8CH / 9~12CH / 13~16CH)

4-2-6 COLOR ADJUSTMENT

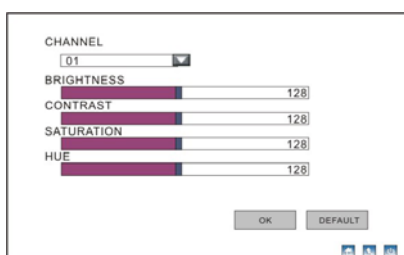

- Adjust camera image color.

- 1.CHANNEL – Select the camera to be modified.
- 2.BRIGHTNESS – Adjust image brightness.(1 ~ 255)
- 3.CONTRAST – Adjust color contrast.(1~255)
- 4.SATURATION – Adjust color saturation. (1~255)
- 5.HUE – Adjust color hue. (1~255)

4-2-7 CAMERA TITLE



1. Left click any place on the screen to bring up the virtual keyboard.

Click to save or click to exit.

2. Click to change channels (1~4CH / 5~8CH / 9~12CH / 13~16CH)

4-2-8 EVENT POPUP



Set Event Popup.

1. CHANNEL – Select camera channel.
2. POPUP – Select POPUP On or Off.
3. EVENT – Select MOTION and/or ALARM checkbox.
4. RECORD DURATION – Period of time of popup in case of Event.(1~99 SEC)

H.264PRO MODEL DVR User Guide

4-3 RECORD & BACKUP

4-3-1 RECORD SETUP




Set Recorder configuration.

1. CHANNEL – Select camera channel. (Channels of 4-camera groups)
2. QUALITY – Recording quality of each camera group selected.
3. FPS – Frames per second.
4. PRE ALARM – Record data 0-5 seconds before alarm occurred. (1-5 SEC)

***Notice : In case of sudden power off while in Pre-Alarm mode, up to 5 seconds of data loss may occur.**

5. REC TIME REMAINING – Displays estimated remaining record time.

4-3-2 SCHEDULE

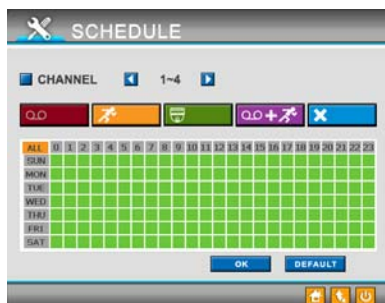

Set Schedule Record Modes/ Appoint Schedule recording by Day and Hour.

1. CHANNEL – Select camera channel. (Channels of 4-camera groups)
2. Record Mode – Select the types of recording:



Set as continuous record.

Set as motion record when motion is detected.

Set as Alarm record when alarm is triggered.


Set as Alarm+Motion record. The DVR records at the speed set in RECORD IN ALARM when there is an alarm triggered, and at the speed set in RECORD IN MOTION where there is motion detected.




No recording scheduled

In case of emergency, click Panic button, and it will start recording at CONTINUOUS MODE at highest resolution. Unless otherwise specified, it records according to this Schedule Record Setup.

4-3-3 HOLIDAY

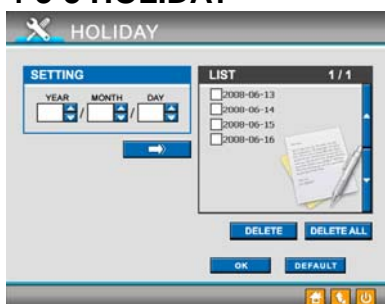


Set holidays to record as setting for Sunday in Schedule Record Setup.

1. Set date on SET HOLIDAY and click  and set date will be listed on HOLIDAY LIST.
2. DELETE – Delete specific holidays from LIST.
DELETE ALL – Delete all holidays.

※It will record as setting for Sunday in Schedule Record Setup.

4-3-4 USB BACKUP

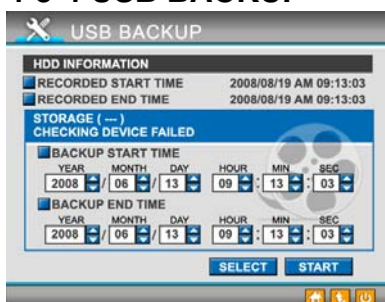

1. HDD INFORMATION – Show total recorded data from Start & End time
2. BACKUP START TIME – Select a starting date and time for backup.
3. BACKUP END TIME – Select an end date and time for backup.
4. SELECT – Input date/time of data to backup and click SELECT button to check total backup data size.
5. START – Click START to begin backup.

※If total backup data size is bigger than CD/DVD storage, End time will be determined automatically.

H.264PRO MODEL DVR User Guide

4-3-5 CD/DVD BACKUP




- 1.HDD INFORMATION – Show total recorded data from Start & End time
- 2.BACKUP START TIME –Select a starting date and time for backup.
- 3.BACKUP END TIME –Select a end date and time for backup.
- 4.SELECT –Input date/time of data to backup and click SELECT button to check total backup data size.
- 5.START –Click START to begin backup.

※If total backup data size is bigger than USB memory , End time will be determined automatically.

4-4 CONFIGURATION

4-4-1 DATE/TIME

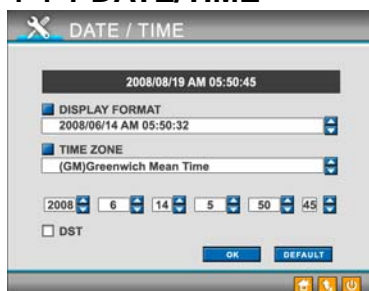

Set time and date of DVR system.


- 1.DISPLAY FORMAT –Set Time Display Format.
- 2.TIME ZONE –Set time and date by selecting your TIME ZONE.
- 3.DST –Select checkbox to enable DAYLIGHT Saving Time mode.(DST)

4-4-2 PASSWORD SETUP



- 1.USER to set User ID.
 - 2.USER PASSWORD – Key in the current password.
 - 3.NEW PASSSSWORD – Key in the new password.
 - 4.CONFIRM PASSWORD –Enter the new password again for confirmation.
 - 5.OK- Click OK to save settings
- CANCEL –Click CANCEL to cancel settings.


4-4-3 REMOTE CONTROL

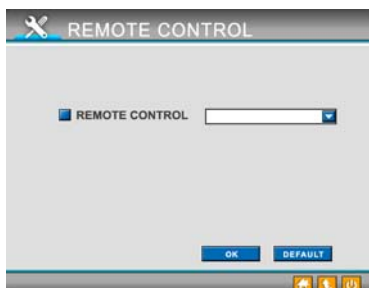

- 1.REMOTE CONTROL –Set Remote Control for DVR.
- ALL – Controlled by all remote control IDs.
- 01~06 – Set DVR to only accept specific remote control ID. DVR and remote control require identical ID.

H.264PRO MODEL DVR User Guide

4-4-4 BUZZER

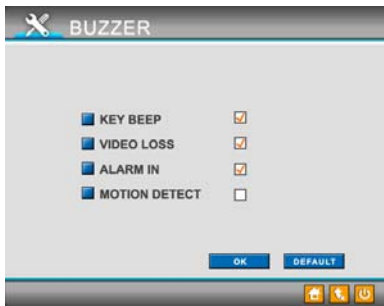

1. KEY BEEP –Turn on/off the beep while operating DVR.
2. VIDEO LOSE –Turn on/off the beep when video lose.
3. ALARM IN –Turn on/off the beep when an alarm is triggered.
4. MOTION –Turn on/off the beep when motion is detected.

4-4-5 HDD SETUP



1. START & END –Displays start and end time of data on HDD.
2. HDD STATUS –Indicates the HDD status.
3. CLEAR HDD –To clear the HDD data, enter the ADMIN's password to execute this function.
4. OVERWRITE –When the hard drive is full, the system will overwrite the earliest recorded video. If the DVR has two hard drives, the overwriting starts from the Master drive.

4-4-6 HDD INFO




1. MODEL –Displays current HDD model number.
2. SERIAL NUMBER –Displays current HDD serial number.
3. SIZE –Displays current HDD capacity .

4-4-7 MOTION SETUP



1. CHANNEL –Select camera channel.
2. SENSITIVITY –Adjust motion detection sensitivity (LOW / MEDIUM / HIGH / VERY HIGH)
3. RECORD DURATION –The DVR record for duration from the time motion is detected. If the DVR detects motion continuously, the DVR keeps recording through out the event, and the duration after the last motion event. For example, the duration is set to 10 seconds and the motion last for 3 minutes. The DVR records for 3 minutes and 10 seconds. ° (5~99 sec)
4. Right button mouse to set motion cell area.

H.264PRO MODEL DVR User Guide

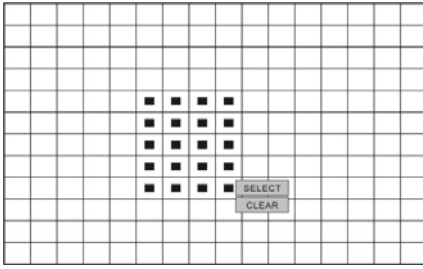

[MOTION MASK SETUP]

Cell Setup - Left click mouse to set Motion Mask Zone by selecting or clearing blocks.


Block Setup - Click selected cell and drag it to desired position.

And then “SELECT” ,” CLEAR” buttons appear.

SELECT –Activates blocks to detect motion.

CLEAR –Deactivate blocks (Grey block).

4-4-8 ALARM

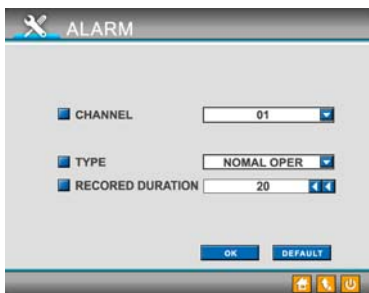

1.CHANNEL - Select alarm sensor input channel.


2.TYPE –Set up the Alarm Input type.

- N.C- when the alarm is triggered, the circuit turns closed (ON).
N.O- when the alarm is triggered, the circuit turns opened (OFF).
OFF - Turn off alarm input

3.RECORD DURATION –Set up a post- alarm recording and alarm output duration. The duration setting is applied to both functions. (5~99SEC)

4-5 NETWORK

4-5-1 ETHERNET

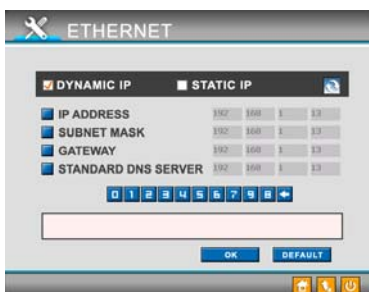

1 Setup DVR Network.

Dynamic IP–Select checkbox to enable connection via Cable Modem with

Dynamic IP. Select  to detect IP automatically

※**DVR must connect to ROUTER or CABLE MODEM in order to obtain IP information automatically.**


STATIC IP –Select checkbox to enable connection via Stable IP.

2.IP ADDRESS –Set up the DVR’s IP address.

SUBNET MASK - Set up SUBNET MASK.

GATEWAY - Set up GATEWAY.

4-5-2 CONNECTION

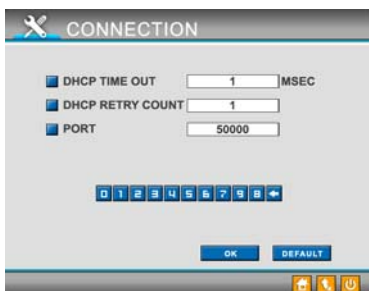

1.DHCP TIMEOUT –Limitation of Time Out maximum value.(MSEC- Millisecond)

※Recommendation:

Increase Time Out in slow network environment

Decrease Time Out in fast network environment

2.DHCP RETRY COUNT – Numbers of time for DHCP to retry connection.

3.PORT - Set IP Port (50000 recommended)

H.264PRO MODEL DVR User Guide

4-5-3 WEB SERVER




- 1.WEB SERVER – Enable / Disable WEB SERVER function
- 2.WEB PORT - WEB SERVER IP Port.

4-5-4 DDNS




- 1.DDNS –DDNS Server address.
 - 2.DDNS DOMAIN – DDNS address.
 3. DOMAIN –DVR name to be registered to server..
- ※ Directly place DDNS server address on IE address bar for connection.For instance:
<http://DOMAIN.mvrddns.com:WEB PORT>

4-5-5 PPPoE

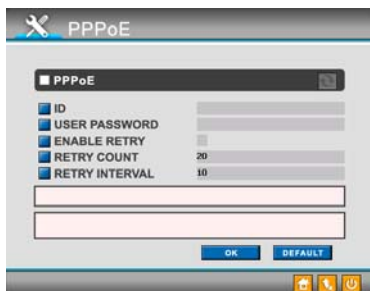

- 1.PPPoE –Set PPPoE Connection.
 - 2.ID –Please enter the ID which you received from xDSL service company.
 - 3.USER PASSWORD –Please enter the PW which you received from xDSL service company
 - 4.ENABLE RETRY – Retry if connection fails.
 - 5.RETRY COUNT –Set up times for client to tries reconnect to the DVR. The client will quit trying after all attempts fail
 - 6.RETRY INTERVAL – Setup reconnect time interval.
- ※It will take about 4 min. to confirm the ID/PW and activate the connection.

4-6 PTZ

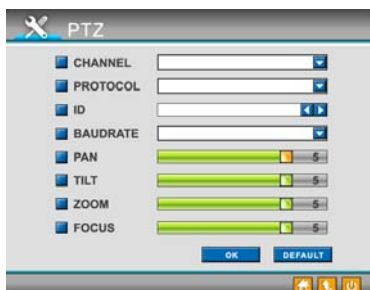


- 1.CHANNEL –Select PTZ channel.
 - 2.PROTOCOL –Select PTZ protocol.
 - 3.ID –Select PTZ ID.
 - 4.BAUDRATE –Select Baud Rate for PTZ control code.
 - 5.PAN/TILT/ZOOM/FOCUS –
- PAN – Set the PANing speed.
TILT – Set the TILting speed.
ZOOM – Set the speed of ZOOM IN/OUT.
FOCUS – Set the speed of FOCUS NEAR/FAR.

H.264PRO MODEL DVR User Guide

4-7 OTHERS

4-7-1 FACTORY DEFAULT

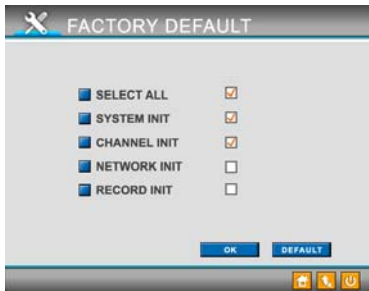

- Reset settings to initial settings.
- Select checkbox to reset.
- Click OK to run selected settings.
- Click CANCEL to return to initial settings


1. The DVR cannot reset the password to default by running Factory Default.
2. It is strongly suggested to run Factory Default and HDD CLEAR when you install a new hard drive(s).

4-7-2 LANGUAGE




Select language.

4-7-3 UPGRADE

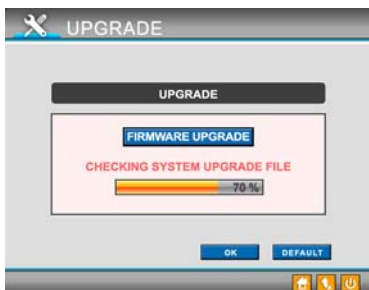

- Insert an USB memory stick which has the firmware (to be upgraded) into the USB port on the front.
- Select "UPGRADE" and DVR will detect the USB memory stick automatically.
- Click "START" to begin upgrading.

4-7-4 SYSTEM INFORMATION

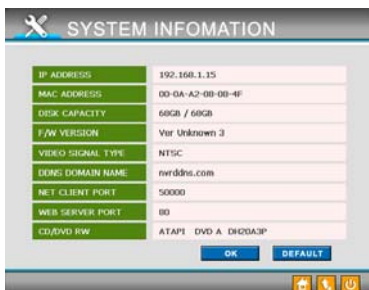


Displays System Information.

※To press ENTER button on the Live mode can display system information.



H.264PRO MODEL DVR User Guide

CHAP.5 IRS and remote connect

5-1 Install Internet Relative Software

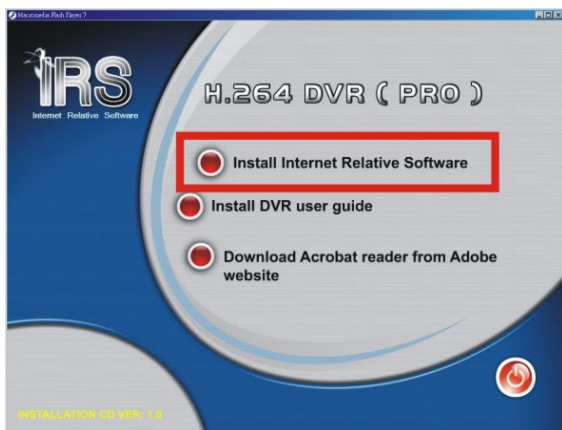


- Insert the Install CD into CD-ROM, and the computer will auto-run the Install program.
- Click[Install Internet Relative Software].

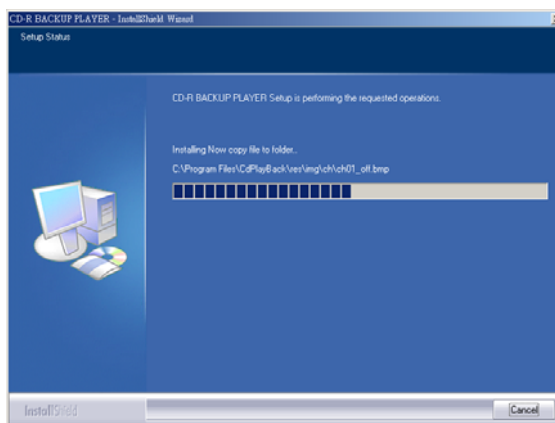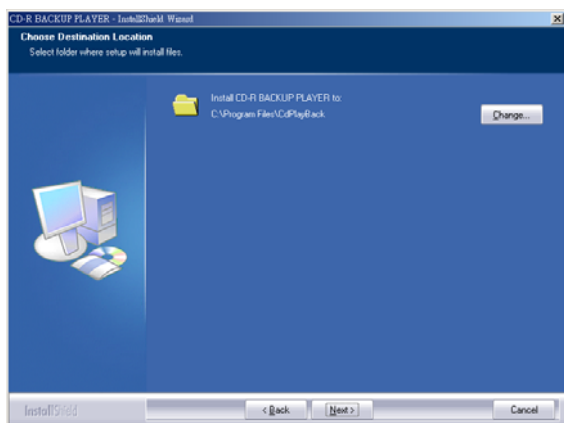

- Select a Destination Folder.

- When finished, the software will create a shortcut on the desktop.

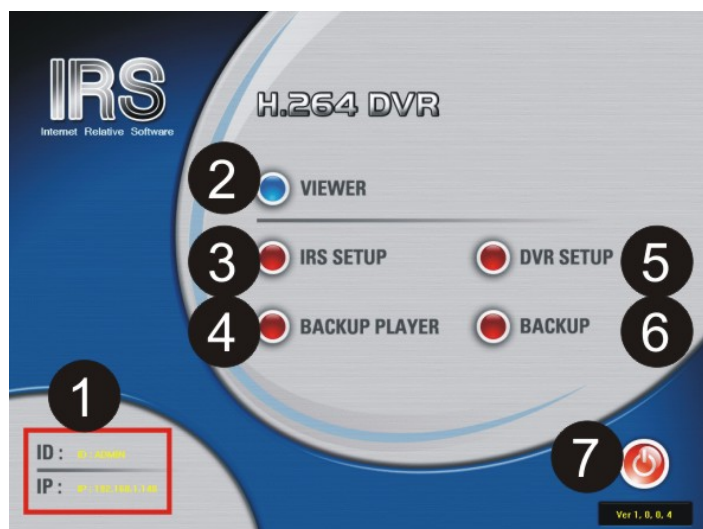

1.ID & IP

- Indicate the IP address and port of DVR.

2.VIEWER

3. IRS SETUP

4. BACKUP PLAYER

5. DVR SETUP

6. BACKUP

7. EXIT

H.264PRO MODEL DVR User Guide


5-2 IRS operation

5-2 -1 Remote users' authorities

	REMOTE VIEWER	REMOTE KEYBOARD	REMOTE SEARCH	REMOTE SETUP	REMOTE BACKUP
ADMIN	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
MANAGER	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
USER	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>

☐ – Accessible / ☒ – Inaccessible

5-2-2 IRS SETUP

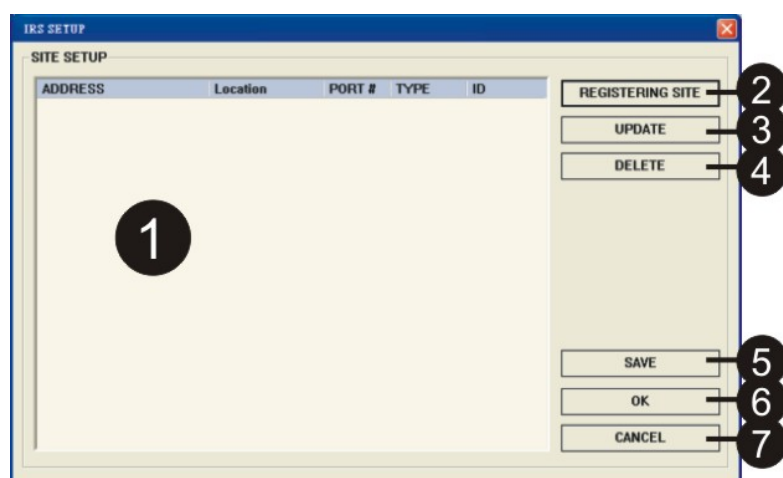

1.[IP LIST]

- List the saved DVR IP addresses.

2.[REGSTERING SITE]

- To register the connection information.

3.[UPDATE]

- To edit the saved connection information.

4.[DELETE]

- To delete the saved DVR site.

5.[SAVE]

- Save the selected IP address.


6.[OK]

- Select and exit IRS setup.

7.[CANCEL]

- Exit IRS setup without any change.

[REGSTERING SITE]

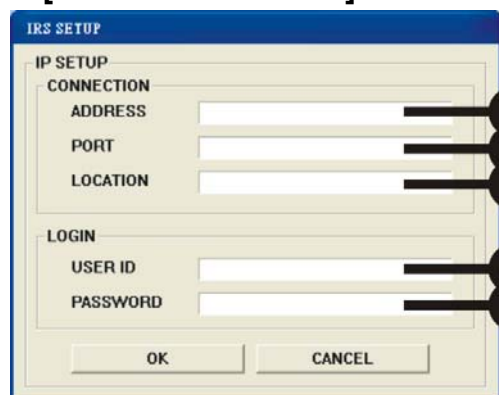

1.ADDRESS - Enter IP address manually.

2.PORT- Enter port number manually.

3.LOCATION-Enter DVR location.

4.ID & PASSWORD-

ID: ADMIN / MANAGER1~3 / USER1~6

PASSWORD: input user password.

5.OK/CANCEL-

OK-save setting.

CANCEL-exit.

H.264PRO MODEL DVR User Guide

5-3 Remote connect

5-3-1 WEB IRS



Directly place DDNS server address or DVR IP address on IE address bar for connection and open Web IRS.

※ Directly place DDNS server address or DVR IP address on IE address bar for connection. For instance:

(1) <http://DVR IP : WEB PORT>

(2) <http://DOMAIN.mvrdns.com:WEB PORT>

※ No input is necessary if WEB PORT is 80.

5-3-2 VIEWER

1. Enter DVR IP address (DDNS), port, ID and password manually, or retrieve information from IRS setup.

2. Connect / Disconnect / Setup

CONNECT- Connect to DVR

DISCONNECT- Stop the connection with DVR.

SETUP- Enter setup.

3. Shows the current connection status.

4. SEARCH- Search recorded data from HDD of DVR. (Date/Time Search, Event List)

KEY PNL- Pop up panel to control CH, REC, PLAY, STOP.


5. TWO WAY AUDIO- Enable Two Way Audio between DVR and Transmitter.

6. PTZ ON : Pan/Tilt control of PTZ Camera.

PTZ OFF: Function as arrow keys.

7. DVR Virtual Key - Same effects as press the keys in DVR panel.

8. Remote playback function key.

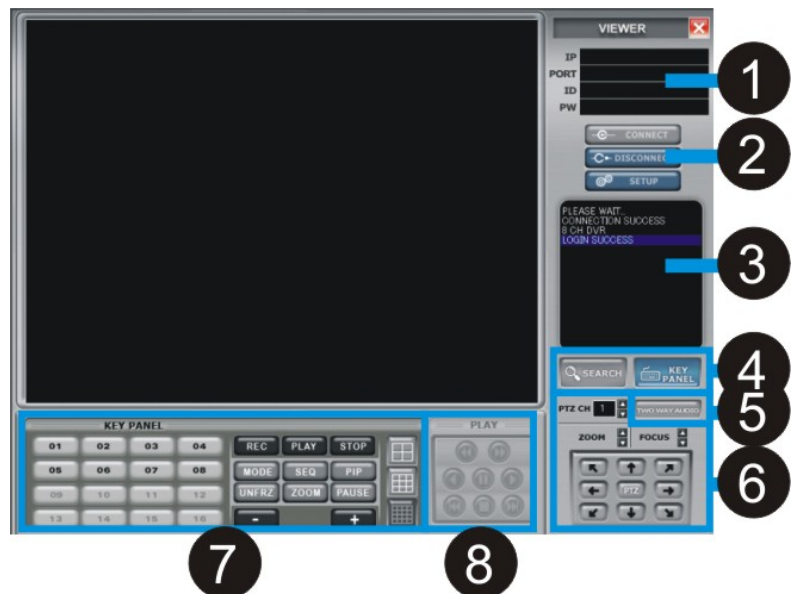

H.264PRO MODEL DVR User Guide

[Key panel]



01~16	Select the channel number of camera to be displayed	PIP	Picture In Picture.
REC	Force Emergency Record	UNFRZ	Unfreeze
PLAY	Playback recorded image on HDD.	ZOOM	Enlarge
STOP	Stop Emergency Record or stop playback.	PAUSE	Stop playback for a short period of time.
MODE	Screen division mode	+ & -	Up/Down button for volume, channel, page.
SEQ	Full screen image displays in sequence.	4/8/16 Division.	4ch, 9ch, 16ch Division.

[Remote playback function key]



	Increase reverse playback speed		Pause
	Increase playback speed		Move to the beginning of recording
	Reverse playback x1		Move to the end of recording
	Playback x1		Stop playback.

[PTZ control]




PTZ CH	Select 4-channel group to be displayed.	ZOOM	Zoom in and zoom out.
FOCUS	Focus near and far.	PTZ	Enable PTZ.

PTZ ON : Pan/Tilt control of PTZ Camera.
 PTZ OFF : Function as arrow keys.

H.264PRO MODEL DVR User Guide

[SETUP]

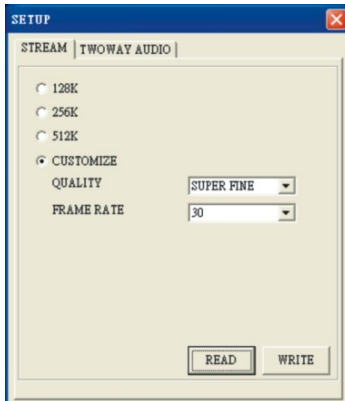

STREAM-

1. 128K~512K- Select fixed transmission speed ◦
2. CUSTOMIZE- personalize transmission settings.

QUALITY-Setup transmission picture quality

FRAMERATE-Setup transmission frame ◦

READ- Retrieve settings from DVR.

WRITE-Store settings to DVR ◦




TWO WAY AUDIO-

MIC - To enable/ disable the MIC to be transmitted to the remote PC.

LIVE/PLAY SOUND –to set up if the audio of LIVE/PLAY will be transmitted to the remote PC.


CH1~4 - Select audio channel.

[SEARCH]

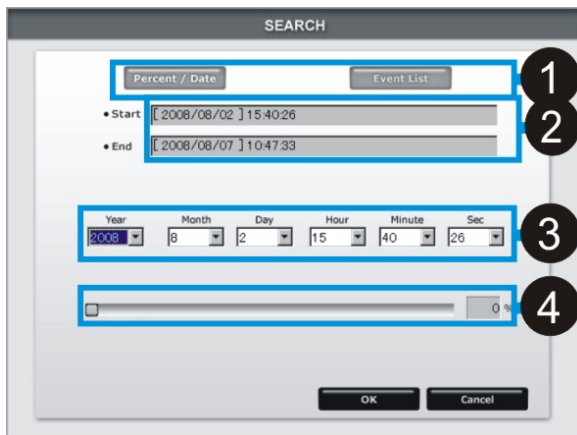

1. Select search mode – Date&time/ Percentage /Event list
2. It shows that the start time and end time of the recording Data.
3. Search by Time and Date as entered. You can change the target Date/Time values
4. Search by Percentage of HDD.


[EVENT LIST]

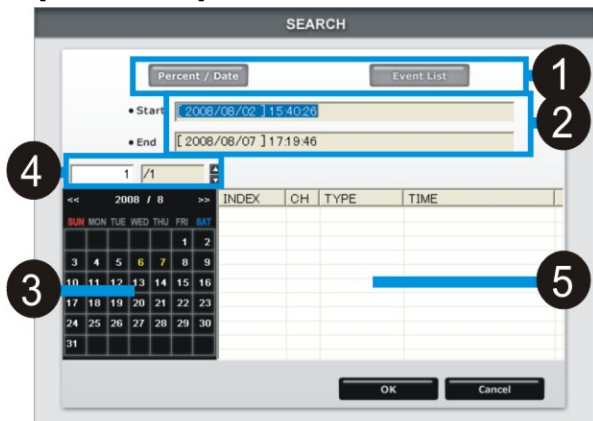

1. Select search mode – Date&time/ Percentage /Event list
2. It shows that the start time and end time of the recording Data.
3. Select a Year/Month/Day to search event.
4. Switch event list page.
5. Select an event from Event List and click twice to start playback.

H.264PRO MODEL DVR User Guide

5-3-3 DVR SETUP

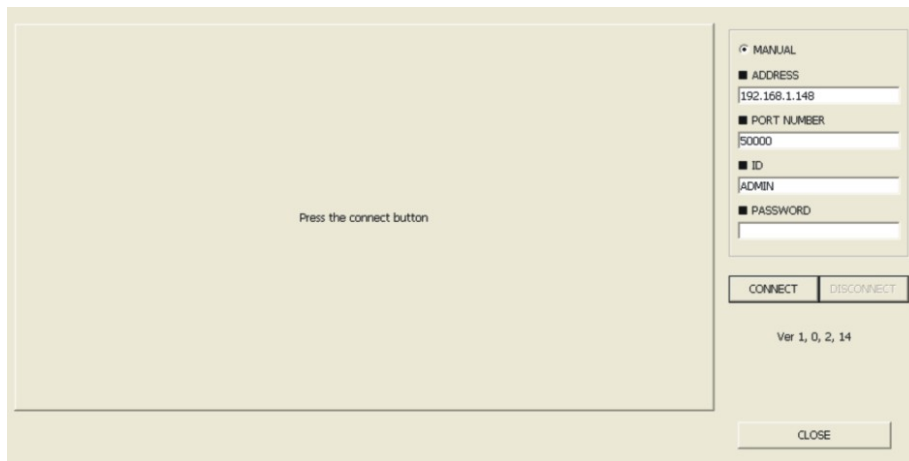

Press the connect button

MANUAL

■ ADDRESS
192.168.1.148

■ PORT NUMBER
50000

■ ID
ADMIN

■ PASSWORD


CONNECT DISCONNECT

Ver 1, 0, 2, 14

CLOSE

Enter DVR IP address, port, ID and password manually, or retrieve information from IRS setup ◦

- The functions listed below can be changed over network : CONFIGURATION , RECORD , EXTRNL DEVICE

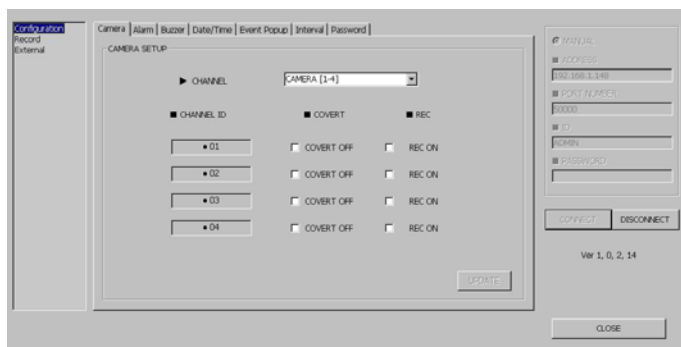

Camera | Alarm | Buzzer | Date/Time | Event Popup | Interval | Password

CAMERA SETUP

► CHANNEL: CAMERA [1-4]

■ CHANNEL ID

■ COVERT

■ REC

■ 01

■ 02

■ 03

■ 04

COVERT OFF REC ON

COVERT OFF REC ON

COVERT OFF REC ON

COVERT OFF REC ON


CONNECT DISCONNECT

Ver 1, 0, 2, 14

UPDATE

CLOSE

[CONFIGURATION]

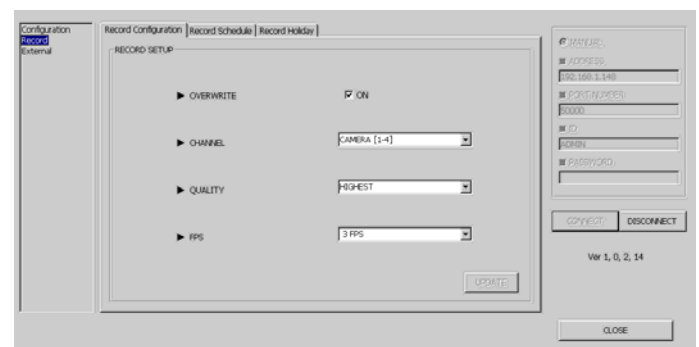

Configuration | Record | External

Record Configuration | Record Schedule | Record Holiday

RECORD SETUP

► OVERWRITE: ON

► CHANNEL: CAMERA [1-4]

► QUALITY: HIGHEST

► FPS: 3 FPS


CONNECT DISCONNECT

Ver 1, 0, 2, 14

UPDATE

CLOSE

[RECORD]

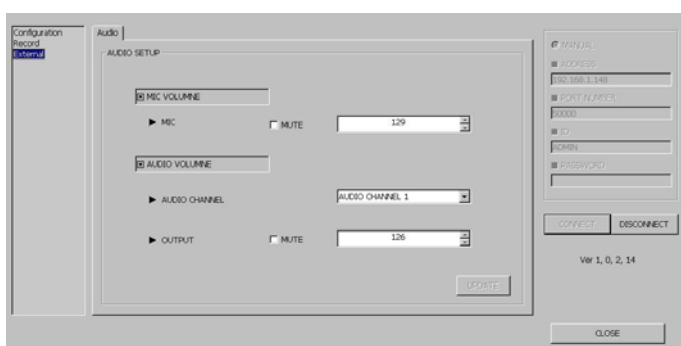

Configuration | Record | External

Audio

AUDIO SETUP

► MIC VOLUME: 120

► MIC: MUTE

► AUDIO VOLUME: 120

► AUDIO CHANNEL: AUDIO CHANNEL 1

► OUTPUT: MUTE

CONNECT DISCONNECT

Ver 1, 0, 2, 14


UPDATE

CLOSE

[EXTRNL]

※Remote setup menu is identical to DVR setup. Please refer to Chap 4 -Set Up for details.

5-4 Remote backup process

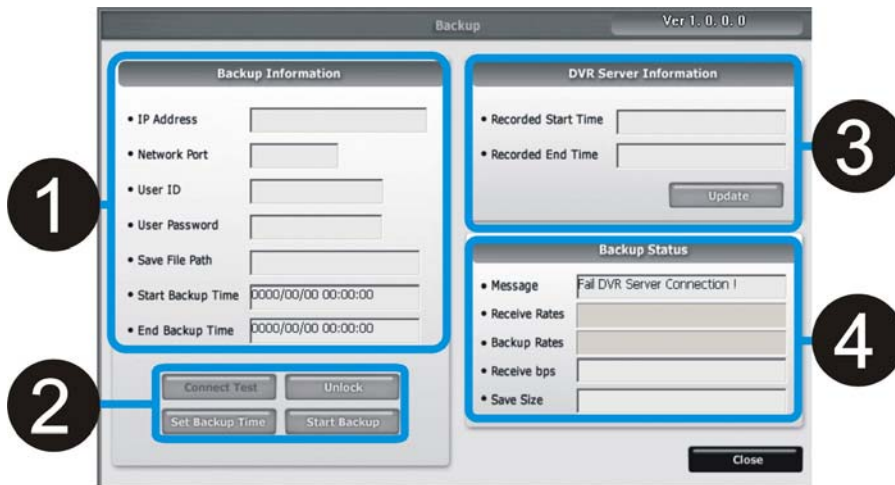

1.[Backup Information]

- IP Address: Enter the IP address of DVR.
Network Port: Enter the port of DVR.
User ID: Enter "Admin".
User Password: Enter Admin's password.
Save File Path: Set a path to save the backup file (This function is active only when the connection is established)
Start Backup Time: The start time of file backup (This function is only active under the connection is established")
End Backup Time: The end time of file backup (This function is only active under the connection is established")

2.[Function setup]

- Connect Test: To test the connection status.
Unlock: To get the record start/End time of DVR.
Set Backup Time: Set the start/end time, size and path of file backup.
Start Backup: Active the backup function.

3.[The information of DVR Server]

- Recorded Start Time: Indicate the recorded start time.
Recorded End Time: Indicate the recorded end time.
Update: Update the recorded time.

4.[Backup Status]

- Message: Indicate the backup status.
Receive Rate: Indicate the percentage of backup image received.
Backup Rate: Indicate the completed percentage of backup image received.
Receive bps: Indicate the bps of backup image received.
Save Size: Indicate the size of backup image saved.

H.264PRO MODEL DVR User Guide

[Backup Procedure]

1. Select [Connect Test] to test the status to DVR connection
2. Select [Unlock] to get the record start/end time of DVR
3. Select [Set Backup Time] to setup the backup function

- ① Indicate the recorded start/end time
- ② Click [Find] to set the path for saving the backup file
- ③ Set the file size of backup file (30~700MB)
- ④ Set the start/end time of file backup

4. Click [Apply] to apply all setup
5. Select [Start Backup] to active the backup function
(User can stop anytime during backup)

※backup file format is HM4.

5-5 Backup player operation

Please click "HIGH SPEED PC" or "LOW SPEED PC" according to your PC's specification.

"HIGH SPEED PC" supports all channel Playback simultaneously.

"LOW SPEED PC" supports up to 4channel playback simultaneously.

※Recommended PC specification for "HIGH SPEED PC" is as below:

Processor Type : Pentium Core2 DUO or better

Memory : 1GB minimum



1. Current time display
2. Status Window - Display backup starting /ending time and status.

3. Screen division /Channel select
 - User can select screen division.
 - Select CH1~CH16.

4.AUDIO

- ON: To start the audio function.
Ch1~4: to select the channel with audio.

5. Function keys

- OPEN: Open the backup file.
EDIT: Edit the backup image.
AVI SAVE: To save the AVI file.
CHANNEL: Popup channel panel.

6.SPEED / DELAY- Adjust the speed of playback.

7.Play bar - Enables to search recorded data by using this bar.



H.264PRO MODEL DVR User Guide


8.[Function bar on playback]



※click left button of mouse twice to switch to split or full screen.

5-5-1 Save AVI file

1. Click to open the backup file and select single channel.
2. Click to open the AVI SAVE function

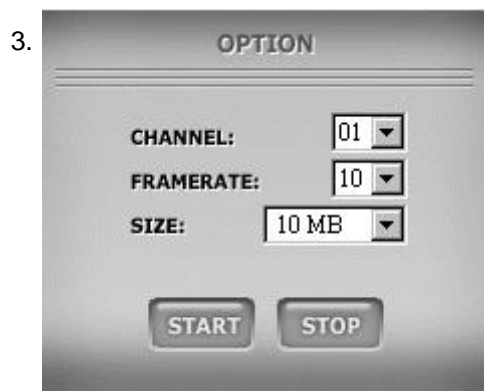

- CHANNEL: Select a single channel
FRAMERATE : Set the frame rate
SIZE: Set the file size of AVI SAVE
START: Start AVI SAVE
STOP: Stop AVI SAVE

※ The AVI file path will be saved under C:\WEB_BACKUP

6-4-2Edit tool

1.[CONTRAST]

- Increase contrast. Decrease contrast.

2.[BRIGHTNESS]

- Increase brightness. Decrease brightness.

3.[SHARPNESS]

- Increase sharpness.

4.[BLUR]


- Increase softness.

5.[SAVE]

- Saves video in JPEG file format. It is saved in the folder where player is installed. ('C:\WEB_BACKUP')

6.[PRINT]


- Print current video.

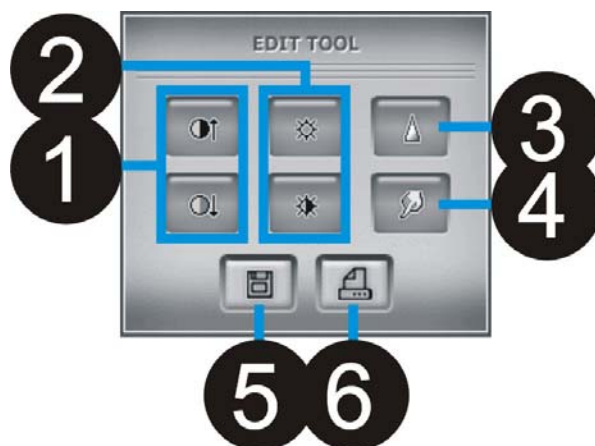

Appendix.1 Router setup

Network installation and setup

[Via Cable]

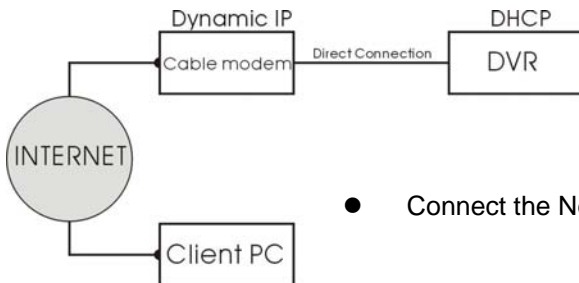


- Connect the Network cable of Cable Modem output to DVR.
- Enter [SYSTEM MENU] ► [EXTERNAL DEVICE] ► [TP/IP SETUP] ► [DHCP SETUP] ► [DHCP MODE]. Place the cursor at DHCP MODE and press ENTER to switch the DHCP MODE to [AUTOMATIC]. Then, move the cursor over [DETECT IP] and press ENTER to detect IP. DVR will automatically get the IP ADDRESS, SUBNET MASK, and GATEWAY from the Cable Modem and shows the IP information on the DVR.
- Press MENU and go back to the previous setup page, [TP/IP SETUP]. Go to [IP CONFIG SETUP] to set up the port number. You can either use the default port number or assign a new one.

[Via ADSL]

- First, identify if you have Static IP or Dynamic IP service. If you do not know, ask your ISP (Internet Service Provider). If you have Static IP, your ISP should provide you a static IP address, which will never change even when you reboot your modem.


[Via ADSL with Static IP address]

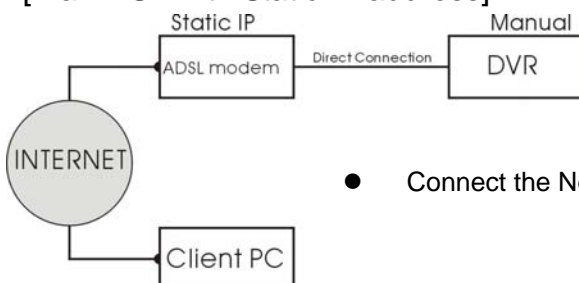


- Connect the Network cable of Cable Modem output to DVR
- Enter [SYSTEM MENU] ► [EXTERNAL DEVICE] ► [TP/IP SETUP] ► [IP CONFIG SETUP]. Enter the IP address, gateway, subnet mask provided by your ISP. Then, assign a port number to the DVR, or you can use the default one as well.
- If you find that you cannot enter or change any addresses, check if DHCP is set to Automatic. Press MENU to go back to the previous page, [TCP/IP Setup], and then enter [DHCP SETUP]. Select DHCP MODE and press ENTER to switch DHCP to MANUAL
- In some very rare cases, we found the DVR did not support certain Static IP Addresses. If it happens, add a Router to the network system. The setup is the same as the next session, [Via ADSL with Dynamic IP.]

H.264PRO MODEL DVR User Guide

[Via ADSL with Dynamic IP]

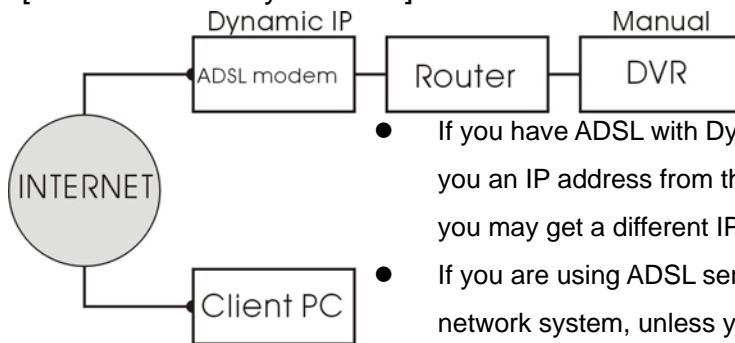

- If you have ADSL with Dynamic IP address, the network administrator assigns you an IP address from their pool when you or your ISP reboots the network and you may get a different IP address from time to time.
- If you are using ADSL service with Dynamic IP, you must add a Router in the network system, unless your DSL MODEM has a built-in Router.

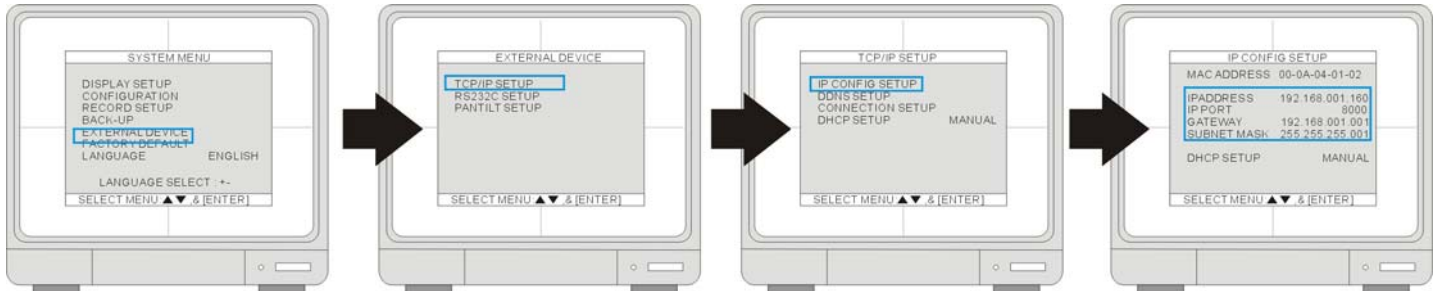

- Go to [EXTERNAL DEVICE] ► [TCP/IP SETUP] ► [IP CONFIG SETUP] to enter the virtual IP address for the DVR and the IPs of gateway and subnet mask. Then, assign a port number to the DVR or you can use the default port number as well.
- If you find that you cannot enter or change any addresses, check if DHCP is set to Automatic. Press MENU to go back to the previous page, [TCP/IP Setup] and then enter [DHCP SETUP]. Select DHCP MODE and press ENTER to switch DHCP to MANUAL.
- The Gateway IP is your router's IP address and the Subnet Mask should match the Subnet Mask IP of your router.

Tip: If you have other computers connected to the router, you can find out the Subnet Mask and Gateway information from the computers. From the computer desktop's Start Menu, choose Run. Type "cmd" to open a command prompt. In this command prompt, type "ipconfig" and hit "ENTER" and it'll show the computer's IP configuration. Your DVR should have the same IP configuration of Subnet Mask and Gateway as the computer, if they are connected to the same router. In addition, the first 3 segments of the local IP Address should be the same as well. For example, if your computer's local IP address is 192.168.1.100, your DVR's IP address should be 192.168.1.XXX.

- Set up the router to forward the port to the DVR. After the setup is completed and the DVR can be accessed from Internet, proceed to the DDNS setup. Since you may get different IP addresses from time to time, setting up the DDNS service allows you to log in from the remote by using a fixed code name, instead of using the IP addresses that are constantly changing.

H.264PRO MODEL DVR User Guide

[Router setup]

- There is a wide selection of routers in the market. They may be very different in terms of configuration and operation. Here is an example of how to set up a router. For details, please read your router's manual.
- First, connect a computer to the router for configuration.

In this example, the DVR's IP is set to 192.168.1.53 and its port number is 8000. The router model is PCI BLW-04G.



- Enter the router's setup and select Static IP or PPPoE.

[WAN connection type]

[Static IP setup]



WAN Connection Type

Internet IP Address:

Subnet Mask:

Gateway:

DNS (Required):

Static IP (MAC Address: 00-90-CC-6E-00-68)

Select the Internet connection type you wish to use

211	20	82	39
255	255	255	248
211	20	82	33
1: 168	95	1	1
2: 168	95	192	1
3: 0	0	0	0

- Select the mode in WAN connection Type
- Enter the static IP Address, Subnet Mask, Gateway, DNS provided by your ISP.
- Save the settings.

H.264PRO MODEL DVR User Guide

[PPPoE setup]



WAN Connection Type: (MAC Address: 00-90-CC-6E-00-68)
Select the Internet connection type you wish to use

User Name:
Password:

Fixed IP Address: ☐ Enable ☒ Disable
IP Address:

☐ Connect on Demand: Max Idle Time Min.
☒ Keep Alive: Redial Period Sec.

- Select PPPoE in WAN connection Type
- Enter User Name and Password provided by your ISP.
- The router will get the IP address upon connection. In this example, we get the IP address of 211.20.82.39.

[Virtual server setup]



Ports		TCP	UDP	Redirect IP Address	Enable
1600	1600	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	192.168.1.180	<input checked="" type="checkbox"/>
8000	8000	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	192.168.1.53	<input checked="" type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	192.168.1.	<input type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	192.168.1.	<input type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	192.168.1.	<input type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	192.168.1.	<input type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	192.168.1.	<input type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	192.168.1.	<input type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	192.168.1.	<input type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	192.168.1.20	<input type="checkbox"/>

- Enter Virtual Server setup.
- Enter DVR's IP (192.168.1.53) and port number (8000). Enable the port and check both protocols of TCP and UDP. Save the settings before leaving this page.
- Once the routing table is setup, when the client software connects to 211.20.82.39 with PORT 8000, the router will forward the packets to its matching destination, 192.168.1.53, and thus connect the client to the DVR.

H.264PRO MODEL DVR User Guide

Appendix.2 System configuration

